
JOYOLIGHt

LS5570/7380

INSTALLATION GUIDE

LINEAR CONNECTION

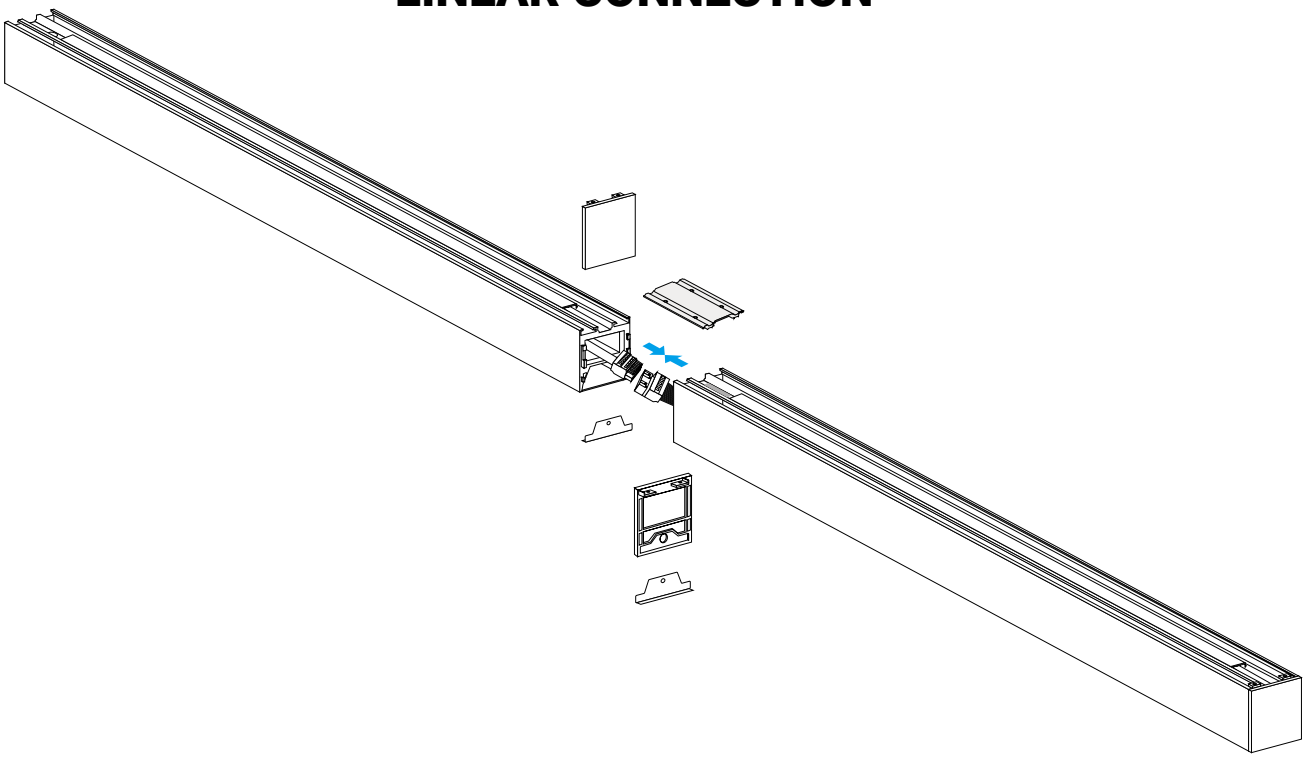

PLEASE READ THESE INSTRUCTIONS CAREFULY BEFORE INSTALLATION

#12, 5200 Dixie Rd.,
Mississauga, ON
L4W 1E4 CANADA
www.joyolight.ca
info@joyolight.com

WARNING

FAILURE TO FOLLOW THE INSTALLATION INSTRUCTIONS BELOW MAY RESULT IN SERIOUS INJURY OR DEATH.

- This product must be installed and serviced by a qualified electrician. Keep the 110 V power wiring separate from the dimming and control wiring.
- Disconnect power before installation, maintenance, or servicing to reduce the risk of electrical shock.
- Do not operate the fixture at a voltage exceeding its specified rating. The power cable must not support the weight of the fixture.
- Ensure that the cable remains free from mechanical tension and has sufficient slack.
- Do not install or use any fixture, component, or connector that is damaged.

CAUTION

- If the product is received with missing or damaged components, please contact Joyolight at 647-496-8107 (Canada).
- If the fixture does not operate properly, switch off the power immediately and contact Joyolight Technical Support for assistance.
- Handle the fixture carefully throughout installation to prevent damage.
- Always wear clean latex or cotton gloves when handling the fixture to prevent fingerprints, stains, or surface marks.
- Unauthorized field modifications or repairs will void the product warranty.


Joyolight reserves the rights change our products and specifications at anytime without prior notice and such modification shall be effective immediately.
Contact Joyolight for the latest product information.

Five-year warranty
Contact us for complete terms and conditions.

JOYOLIGHT GROUP INC.
#12, 5200 Dixie Rd.
Mississauga, ON, L4W 1E4

www.joyolight.ca
info@joyolight.com
1-877-849-1942 (US)
647-496-8107 (CA)

Optional Installation Steps

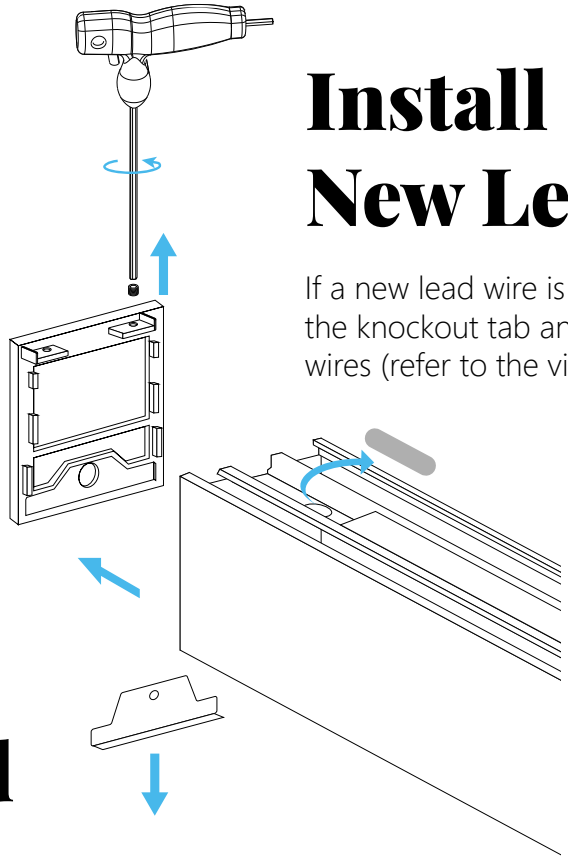

Install a New Lead Wire

If a new lead wire is required, remove the knockout tab and connect the lead wires (refer to the video guide).

Remove Pre-Installed End Components

If the fixture is supplied with end caps and anti-light-leak clips already installed, remove them as shown in the diagram before proceeding with the installation.

Joyolight reserves the rights change our products and specifications at anytime without prior notice and such modification shall be effective immediately.
Contact Joyolight for the latest product information.


Five-year warranty
Contact us for complete terms and conditions.

JOYOLIGHT GROUP INC.
#12, 5200 Dixie Rd.
Mississauga, ON, L4W 1E4


www.joyolight.ca
info@joyolight.com
1-877-849-1942 (US)
647-496-8107 (CA)

Installation Steps (Linear Connection)


1. Insert the connection plate into one of the fixtures first.

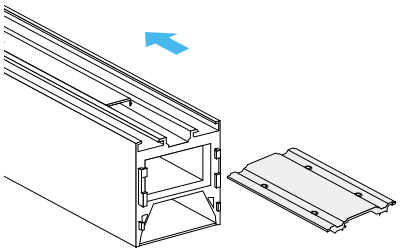


2. Pull out the male and female connector cables from the fixtures and connect them securely.

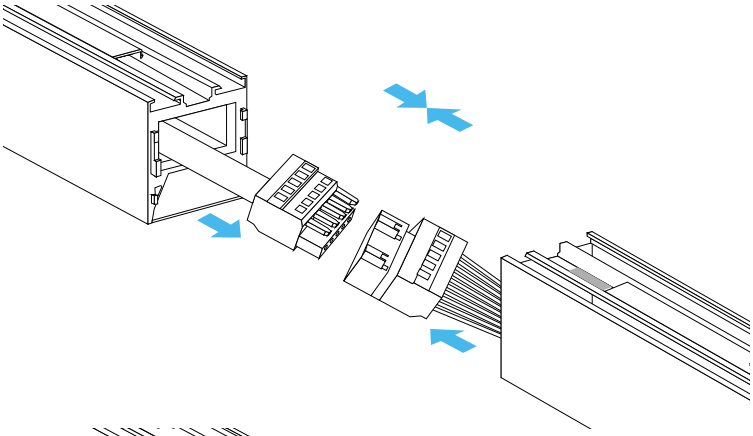

3. Align the two fixtures. If the fixture with the convex connector sits slightly higher than the fixture with the concave connector, gently press it down until both fixtures are level and properly aligned.

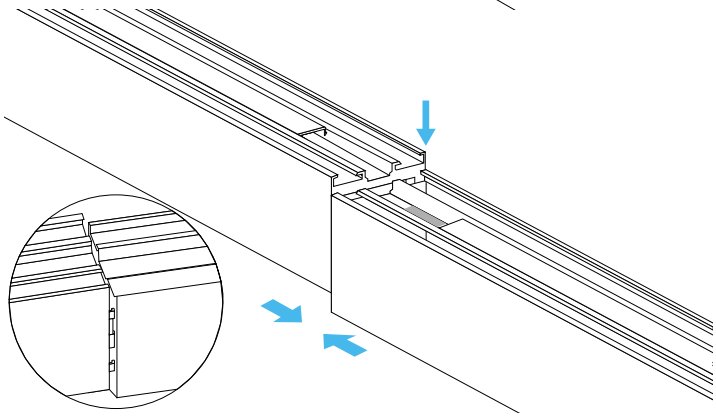

4. Secure the connection plate to complete the installation.

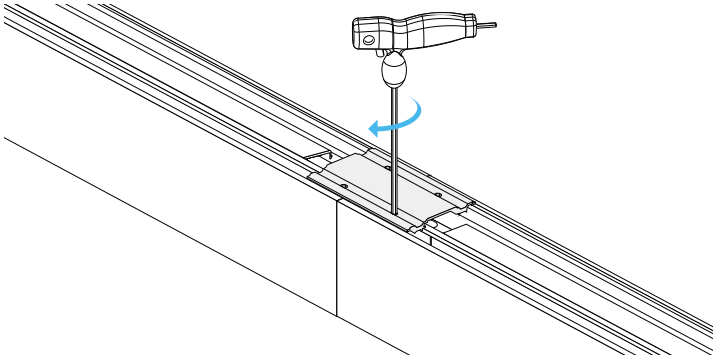


Joyolight reserves the rights change our products and specifications at anytime without prior notice and such modification shall be effective immediately.
Contact Joyolight for the latest product information.

Five-year warranty
Contact us for complete terms and conditions.

JOYOLIGHT GROUP INC.
#12, 5200 Dixie Rd.
Mississauga, ON, L4W 1E4

www.joyolight.ca
info@joyolight.com
1-877-849-1942 (US)
647-496-8107 (CA)

Installation Components Diagram

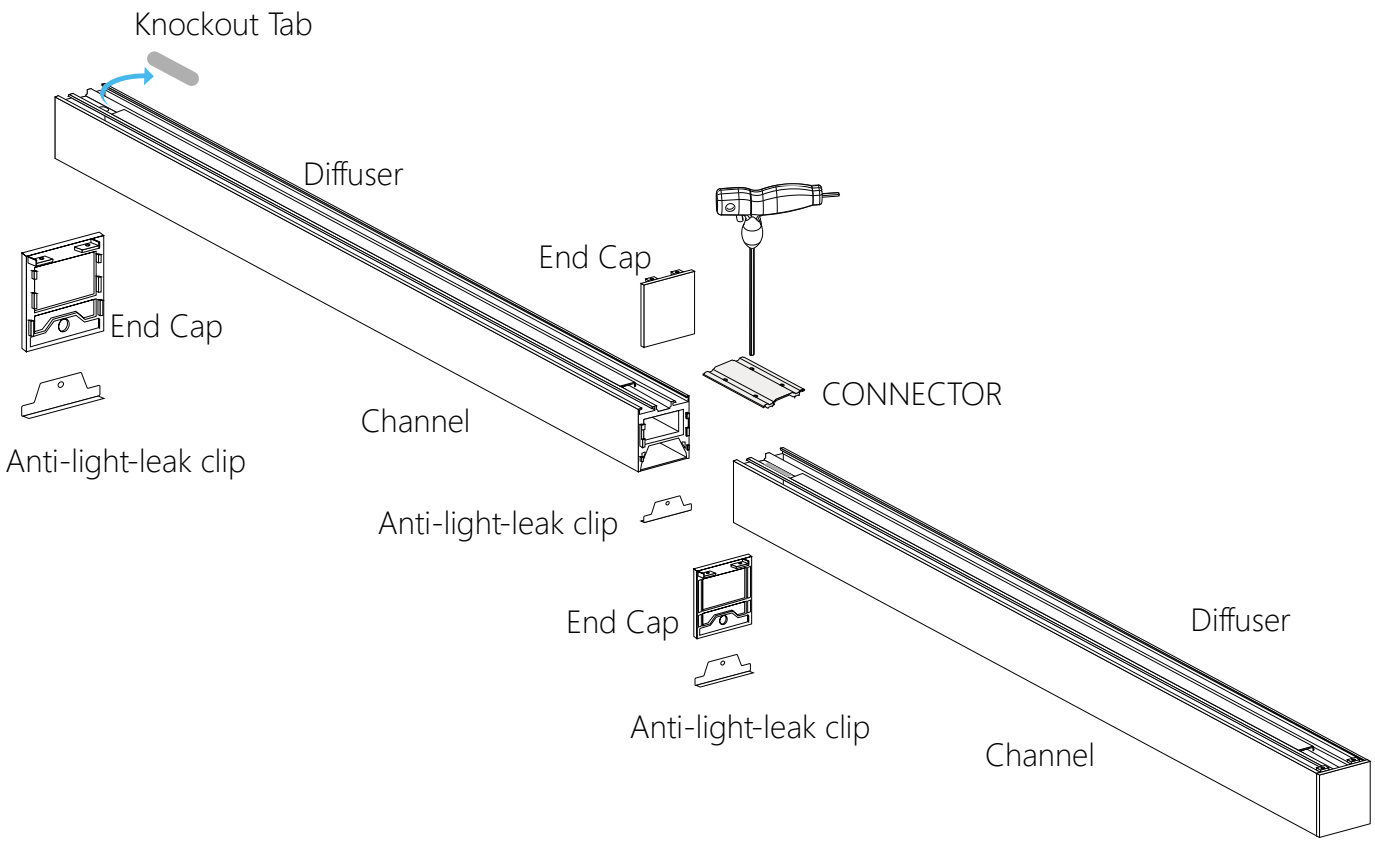

Joyolight reserves the rights change our products and specifications at anytime without prior notice and such modification shall be effective immediately.
Contact Joyolight for the latest product information.

Five-year warranty
Contact us for complete terms and conditions.

JOYOLIGHT GROUP INC.
#12, 5200 Dixie Rd.
Mississauga, ON, L4W 1E4

www.joyolight.ca
info@joyolight.com
1-877-849-1942 (US)
647-496-8107 (CA)